RM-X114

SERVICE MANUAL

US Model
AEP Model
UK Model

Ver 1.0 2001. 01

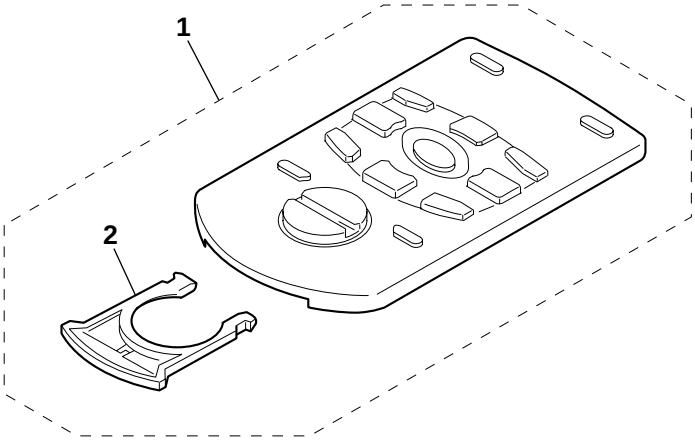

PARTS LIST

Ref. No.	Part No.	Description	Remark
1	1-476-526-11	REMOTE COMMANDER	
2	3-230-047-01	LID, BATTERY CASE	
	2-201-810-01	TAPE, MAGIC	

REMOTE COMMANDER

9-870-262-11
2001A0400-1
© 2001. 1

Sony Corporation
Audio Entertainment Group
General Engineering Dept.

SONY®